



Correct usage:

BAG SPOT is a mobile source of light in a small and compact design. It was developed for illumination of purses and handbags and is allowed only for operating with 2 batteries CR2032.

Safety instructions:

Before using for the first time the whole instruction manual has to be read. Herein you can find indications for the correct usage.

Damages caused by operating the device incorrectly because of not using the instruction manual are not part of the warranty claim.

We do not accept liability for damage and or consequential damage arising out of incorrect useage.

! For registration (CE) and security reasons an unauthorized modification or adjustment it is not allowed.

! This device is not a toy and therefore has to be handled accordingly.

! Removed batteries and retainers for the batteries may be swallowed by children or animals. Please consider this when taking out the batteries and do not leave small parts carelessly.

! Keep the device away from moisture. Avoid usage in humidity > 95 %.

! Do not expose the device to temperatures < - 10°C and > + 50°C. Do not place the device directly in the sun.

! Avoid looking directly into the illumination and do not flash other persons' or animals' eyes. It may cause damage to the eyes.

! Dispose packing materials adequately and avoid damages on children or animals caused by carelessly left packing materials.

OPERATING BAG SPOT

Switch on the device by pressing one of the two buttons.

The switch-off is being carried out automatically after the time adjusted.

CONFIGURATION OF BAG SPOT

Adjusting the period of illumination:

Press and hold the left button.

The lights go off after the last adjusted time period.

Keep the button pressed.

After a few seconds both lights will blink every second for a short time.

Every blinking extends the duty cycle by one second.

The duty cycle results of a minimum period of five seconds plus the number of blinking in seconds.

As a maximum 35 seconds can be set.

The adjustment is finished as soon as you release the left button.

Adjusting brightness:

Press and hold the right button.

After a few seconds brightness is starting to change every two seconds.

This procedure will repeat as long as you keep the button pressed.

Release the button when the brightness is congenial to you.

Herewith, brightness is adjusted.

By taking out the batteries the adjusted settings are put back to the default settings.

Safety instructions for batteries:

Please do not leave batteries and their retainers carelessly. Children or animals might swallow them.

In case of swallowing a battery go to see a doctor immediately.

Leaking and damaged batteries may chemically burn the skin when touching them. Please protect yourself properly.

Do not recharge or throw the batteries into the fire.

Also, do not short-circuit the battery, it may explode.

Changing the battery

The batteries have to be exchanged when BAG SPOT is shining very weakly or not at all.

Check beforehand if the brightness is set weakly. For information about adjusting the brightness see above paragraph "CONFIGURATION OF BAG SPOT".

Take out both batteries from the battery compartment and replace them with new ones of the same type.

You can obtain new batteries from all BAG SPOT distributors.



As end-consumer of the batteries you are obligated to dispose the batteries adequately.

Environmental protection is the purpose of these regulations.

Technical data

Operating voltage of 2 batteries CR2032

approx. 6VCD

Current consumption accordingly to adjusted brightness

approx. 8 – 35mA

Switch-off automatically after set time

approx. 5 – 35 seconds

Maintenance of the device

If necessary clean the device with a slightly wet cleaning rug or brush.

Do not use aggressive or chemical solvents.

Disposal of the device

Do not dispose a device that is not used anymore with the domestic waste. Please notice the legal requirements to this.

Before disposal of the device, remove the batteries and dispose them adequately.